



2

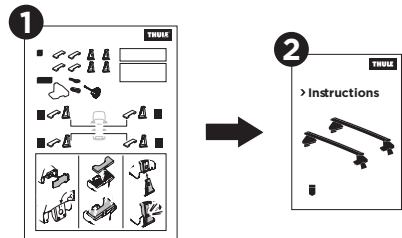

> Instructions

Thule Evo Clamp
710500

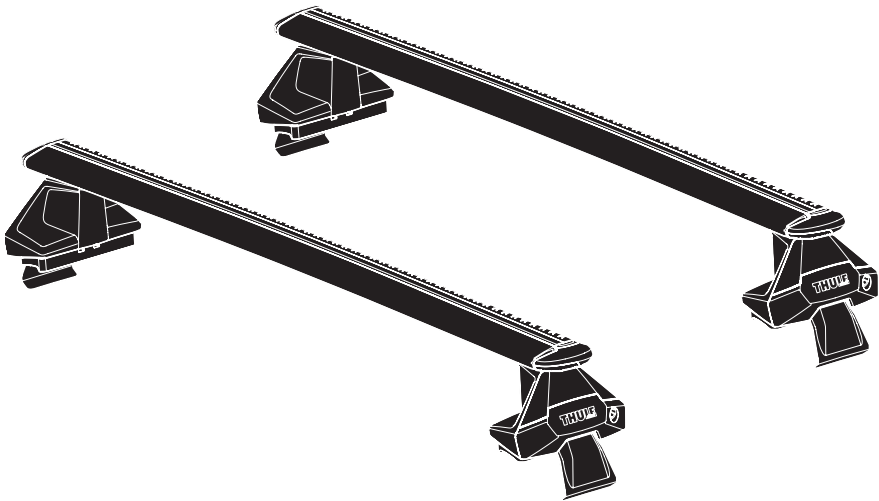

EN Roof mounted load carrier
DE Lastenträger zur Dachmontage
FR Barre de toit
NL Dakdrager
IT Barra portatutto da installare sul tetto
ES Portaequipajes de techo
PT Barra para montagem no tejadilho
SV Takmonterad lasthållare
DK Tagmonteret lastholder
NO Takmontert lasteholder
FI Katolle asennettava teline
ET Katusele paigaldatav katuseraam
LV Uz jumta uzstādāms kravas turētājs
LT Ant stogo tvirtinamas krovinų laikiklis
PL Uchwyt na bagażnik bazowy montowany na dachu
RU Багажник на крышу
UK Багажник для даху
BG Багажник, монтиран върху покрива
CS Nosič pro montáž na střechu
SK Strešný nosič
SL Nosilec za strešni prtljažnik
HR/BIH Krovni nosač tereta



RO Suport încărcătură montat pe acoperiș
HU Tetőre szerelhető csomagszállító
EL Στήρα οροφής για μεταφορά φορτίου
TR Araç üstüne bağlanan yük taşıyıcı

מנשא מטען לגג הרכב **HE**
 حامل نقل مثبت على السقف **AR**

ZH 顶置行李架
JA ルーフマウント型ロードキャリア
KO 루프 장착 화물 캐리어
TH โครงยึดของบรรทุกแบบติดตั้งบนหลังคา

CITY CRASH
Complies with ISO norm


ISO 11154-E

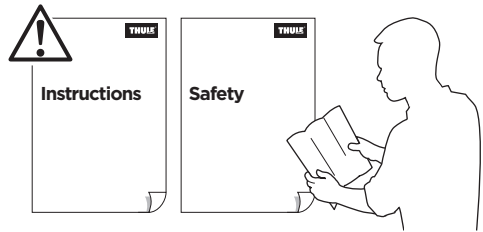



Max 130 km/h
80 Mph



Your Key-Number

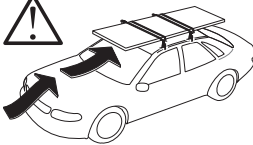


80 km/h
50 Mph

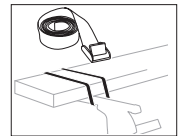


> Mounting Tutorial
Thule Evo Clamp

THULE
SWEDEN

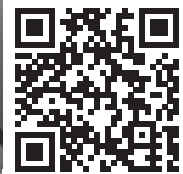




thule.com

1
KIT

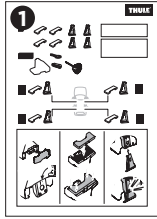

+


2
FOOT PACK

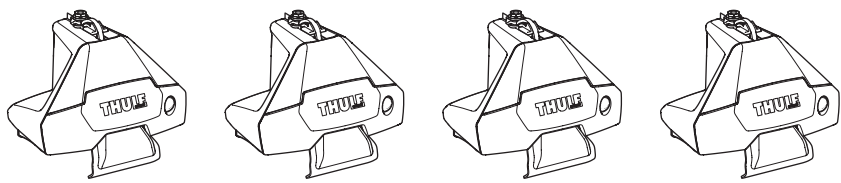


3
BAR




THULE
WingBar Evo

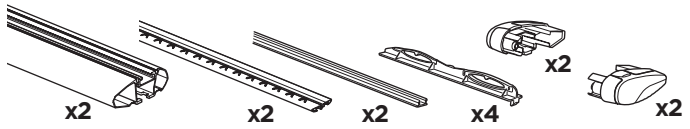


THULE
WingBar

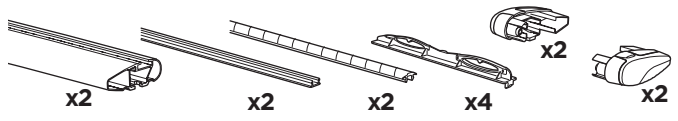



THULE
SlideBar Evo

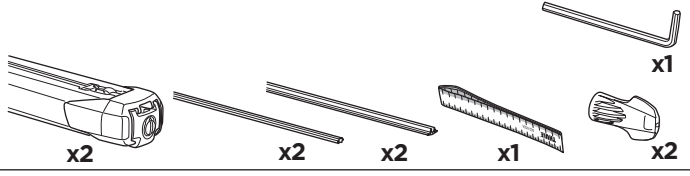

THULE
ProBar Evo

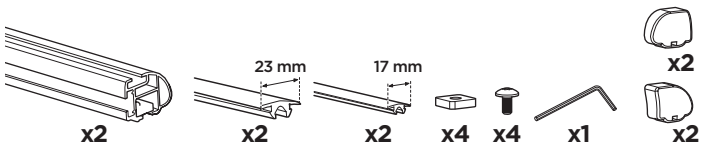


THULE
SquareBar Evo

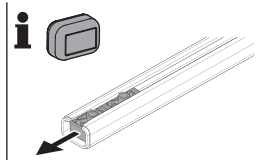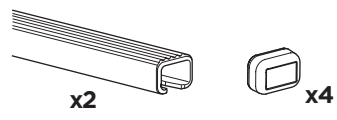





A

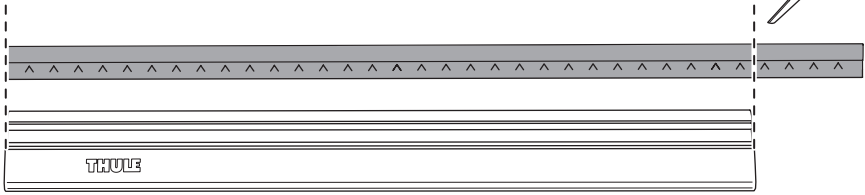





B

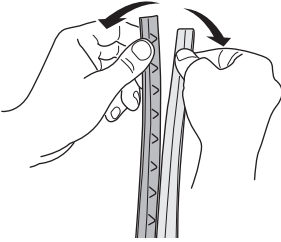


C

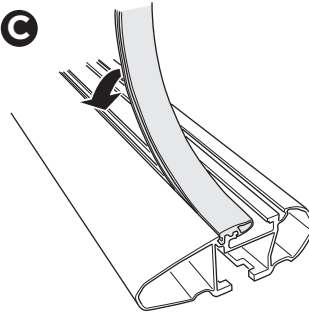

D

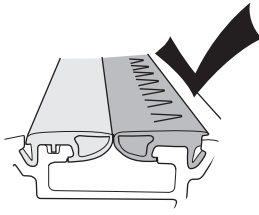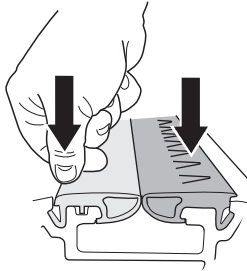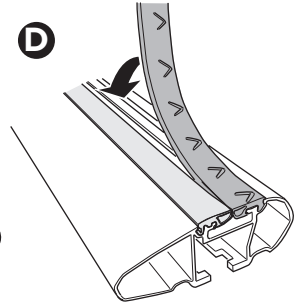

x2

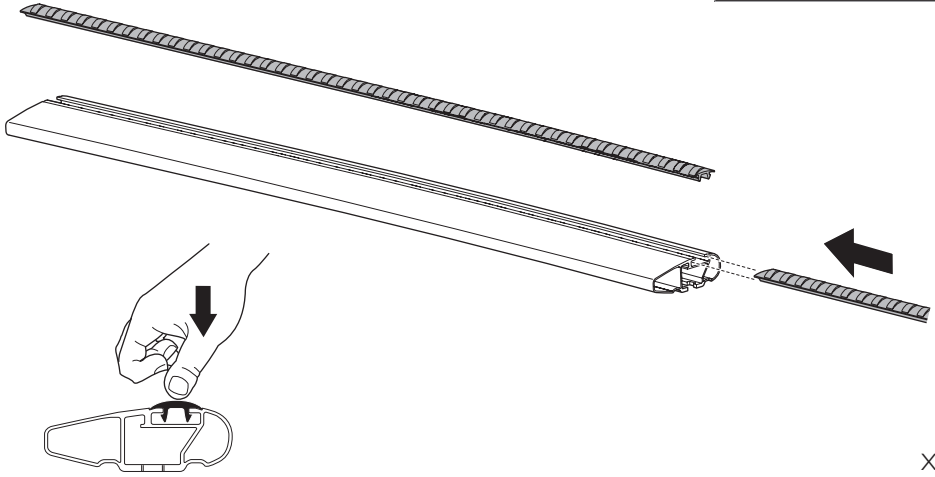

x2


5



A

B

C

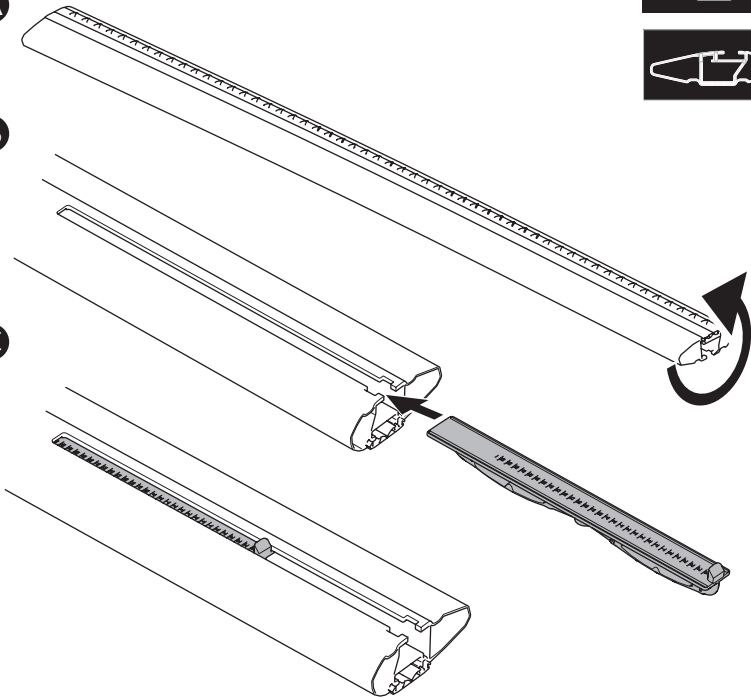

x4



6




+




+

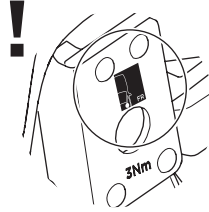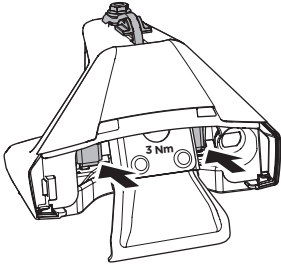

A

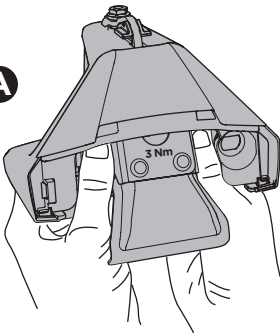


B

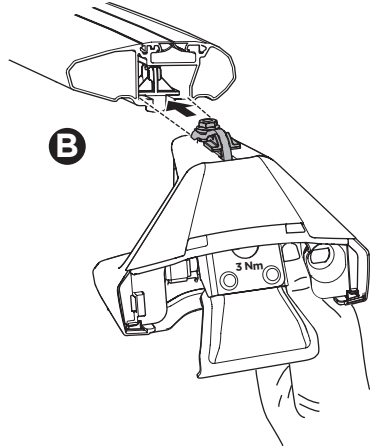


x4

7

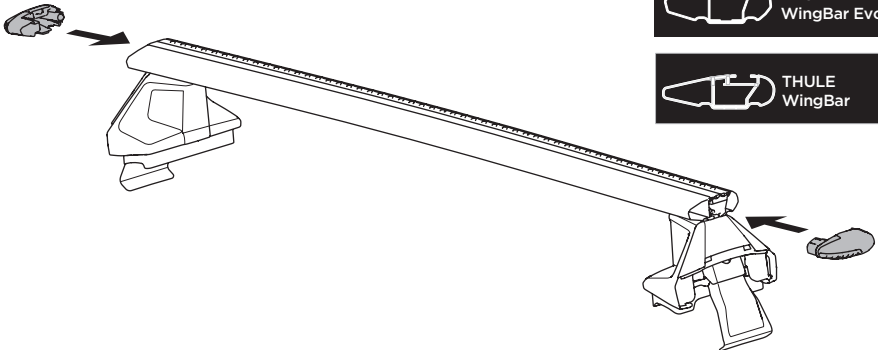


x2

 THULE
SquareBar Evo

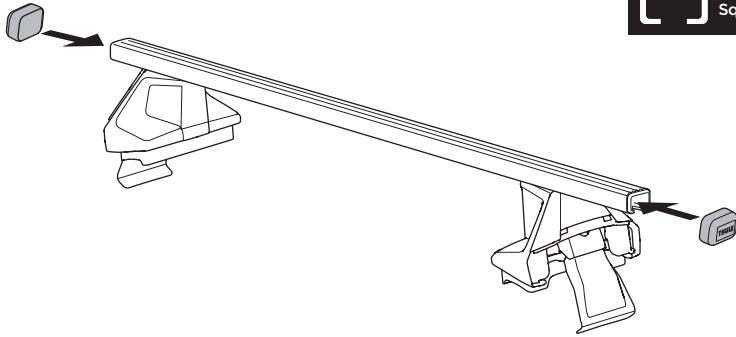


x2

 THULE
ProBar Evo


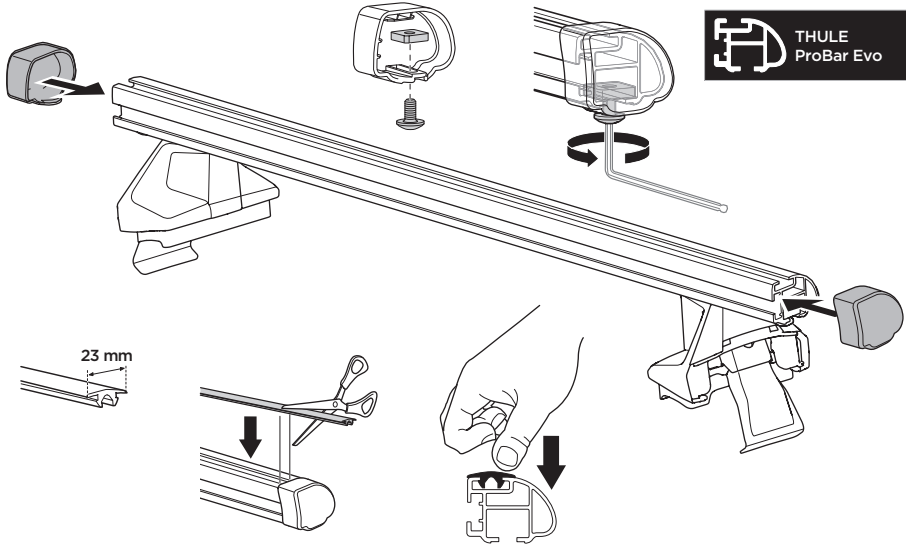


x2



 THULE
SlideBar Evo

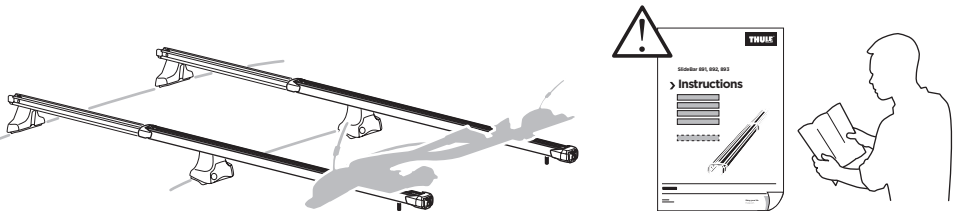



8

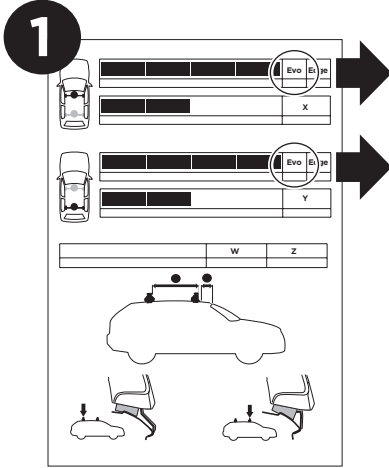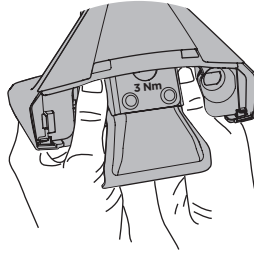


X / Y Scale

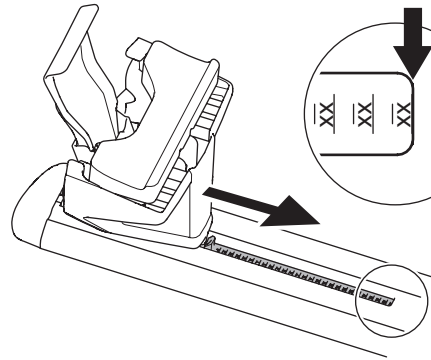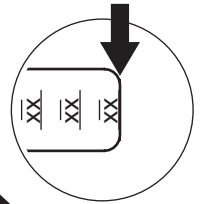




x4

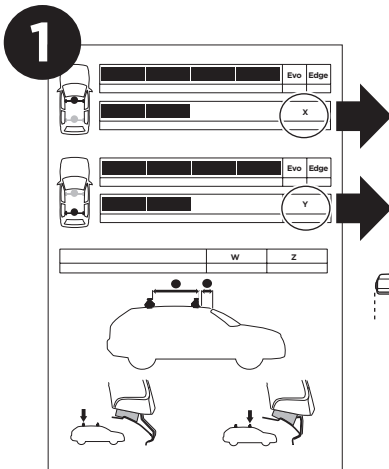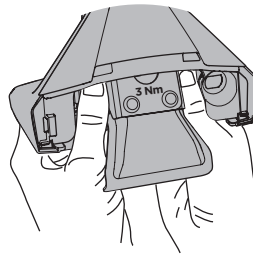

X / Y (mm / inch)



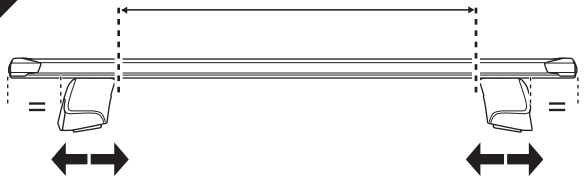


x2




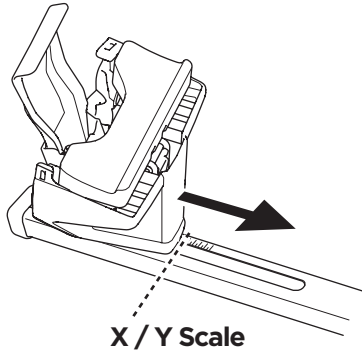
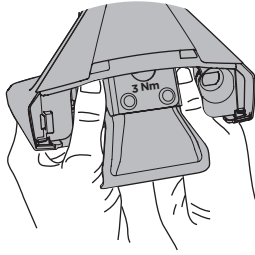
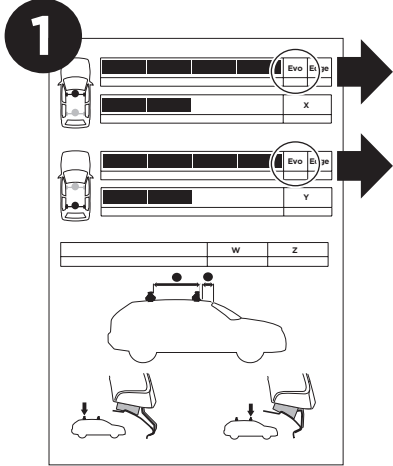


x4





9

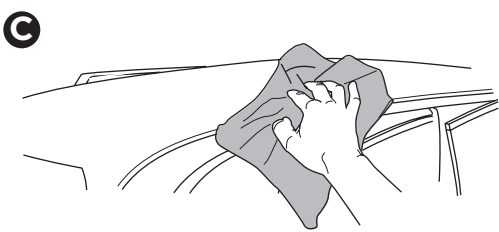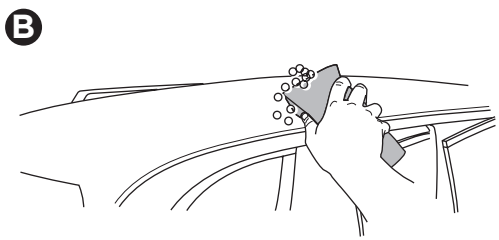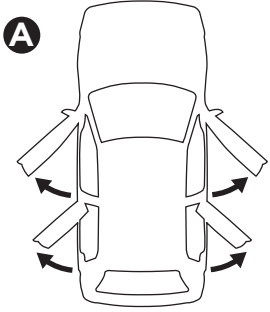

10

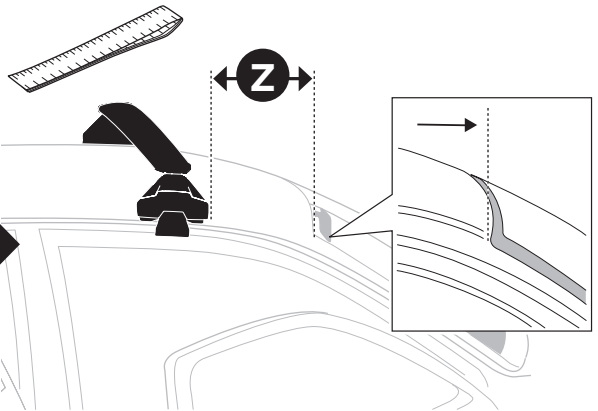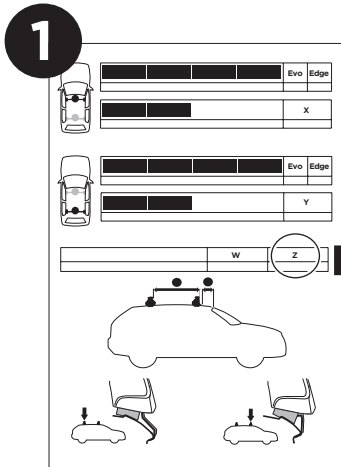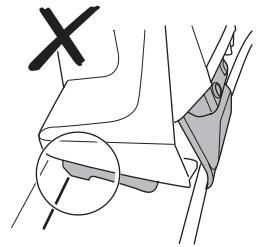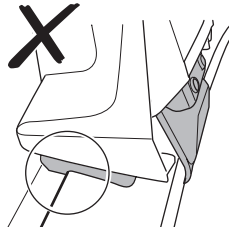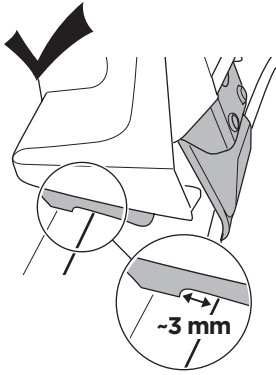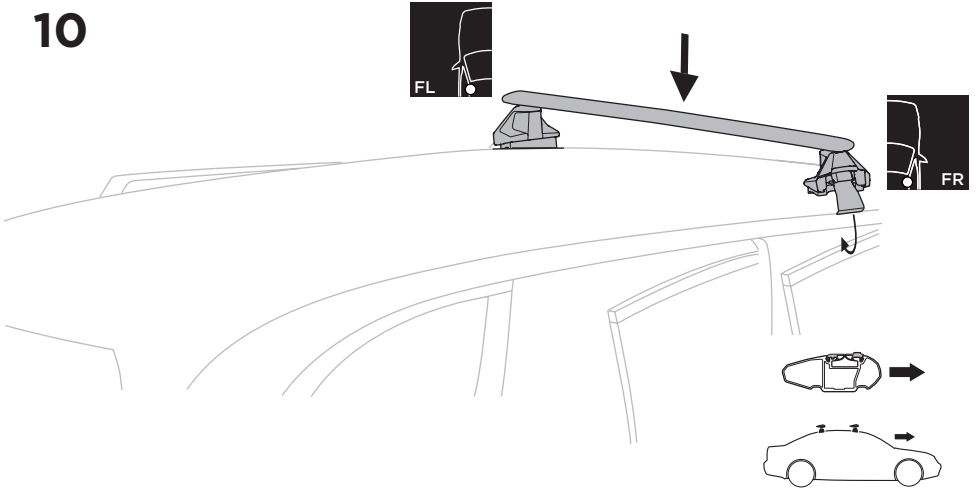


11

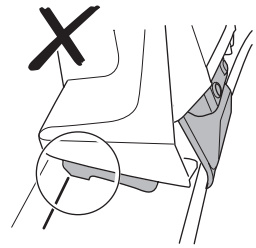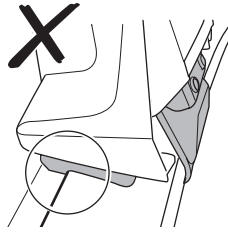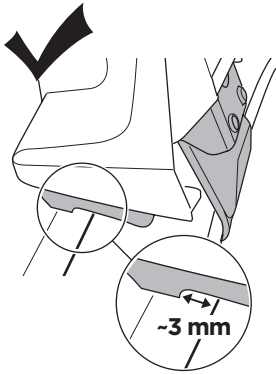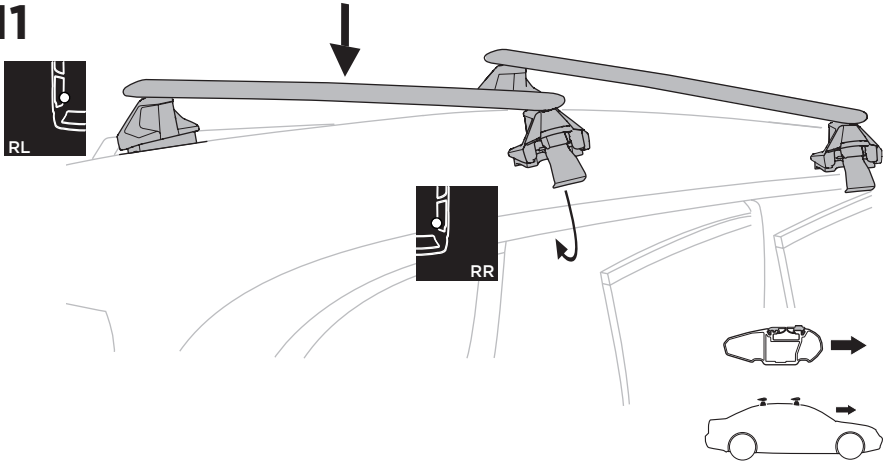

1




		Evo Edge
		X
		Evo Edge
		Y

W Z

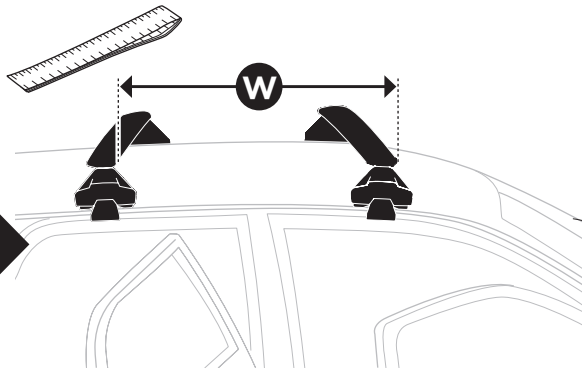

12



-50%

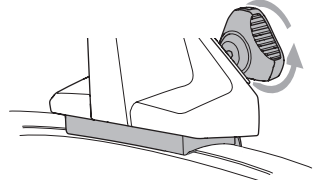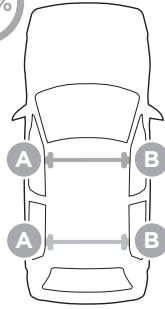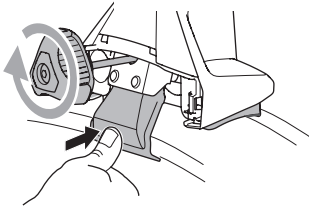

100%



Click
Click

3 Nm

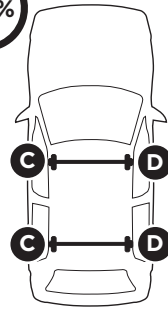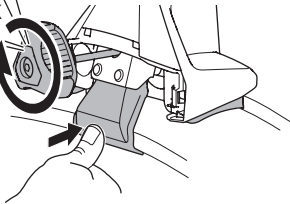


Click
Click




3 Nm

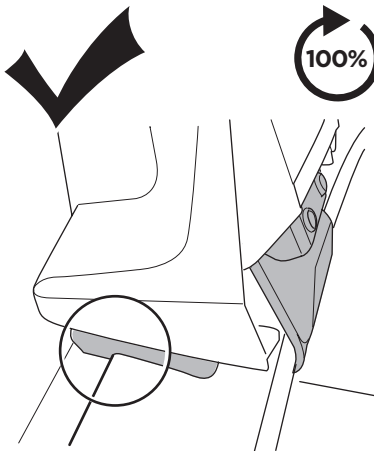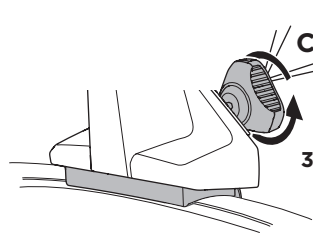





1

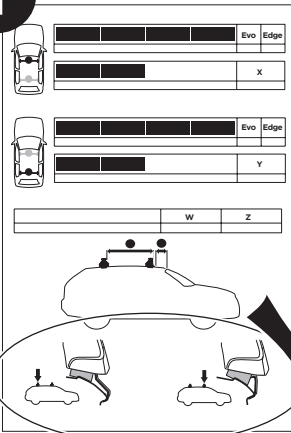

13

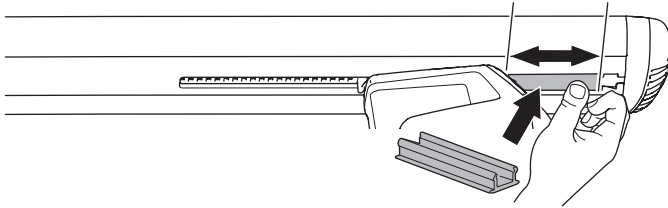

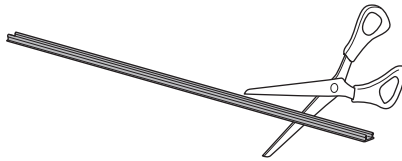


x4

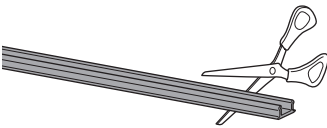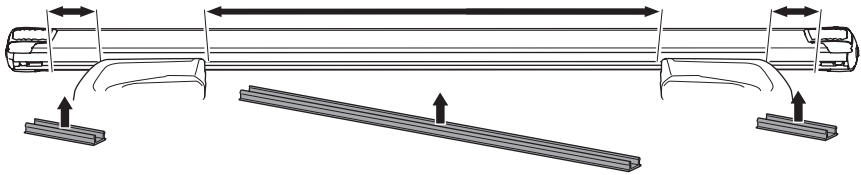




x2

17 mm

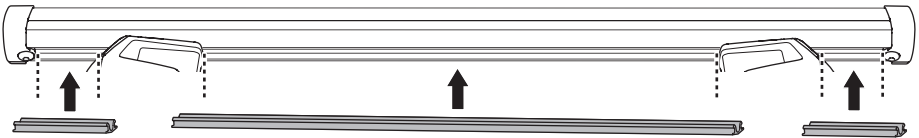




x2

14

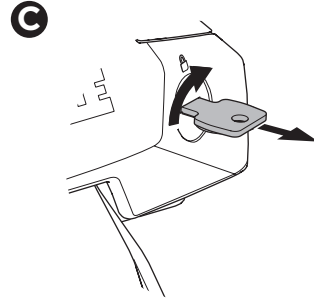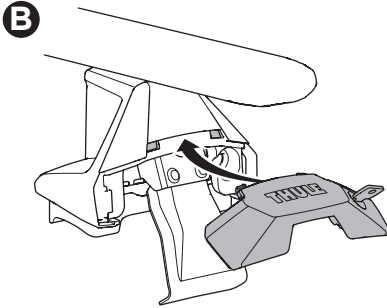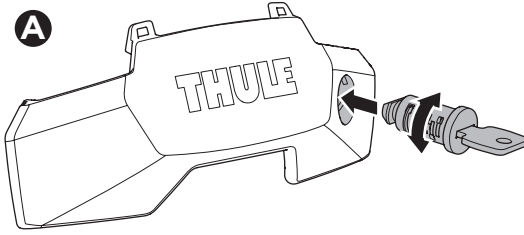

x4


15

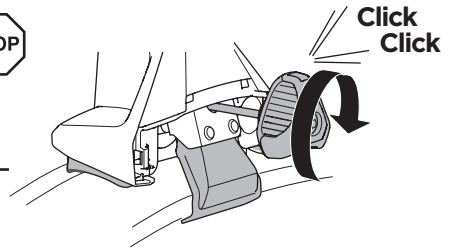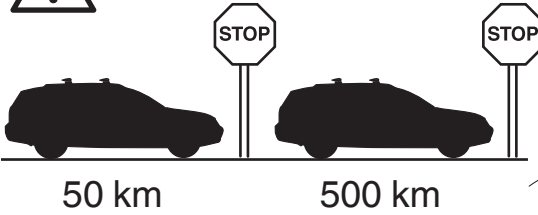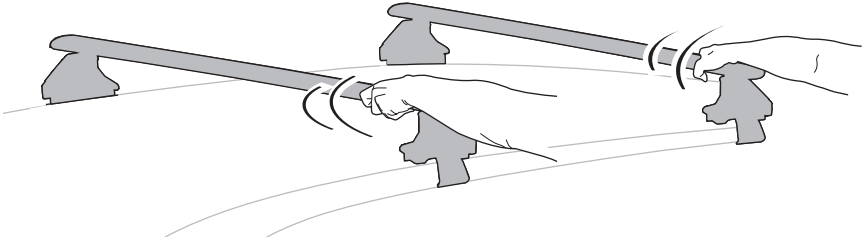


i




THULE WingBar Evo

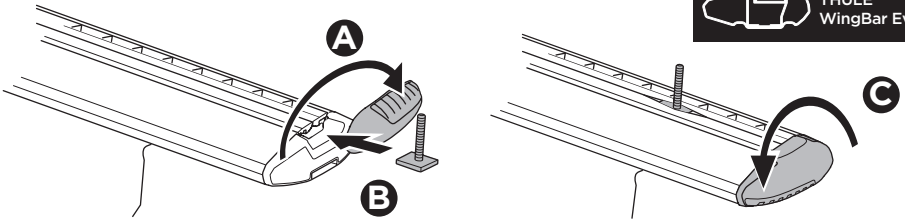

THULE WingBar

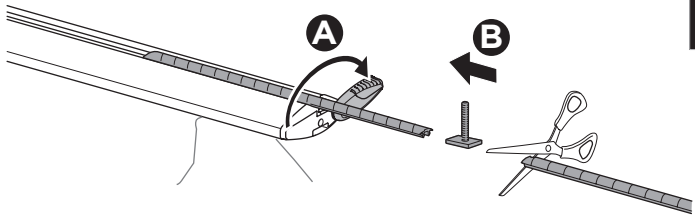

THULE SlideBar Evo

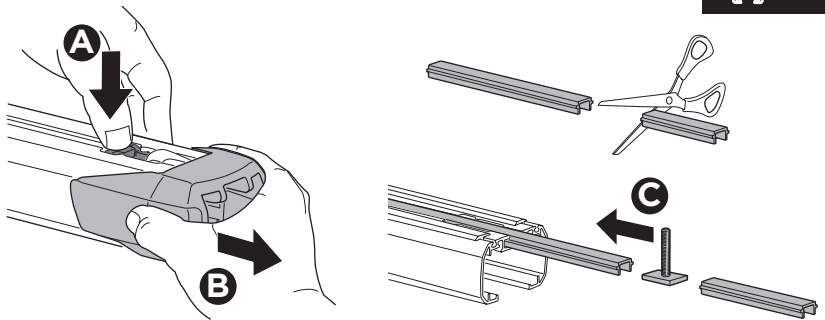

THULE ProBar Evo

